


# HPP26DMF spare parts list

## From serial No. 11315

Fig. 1

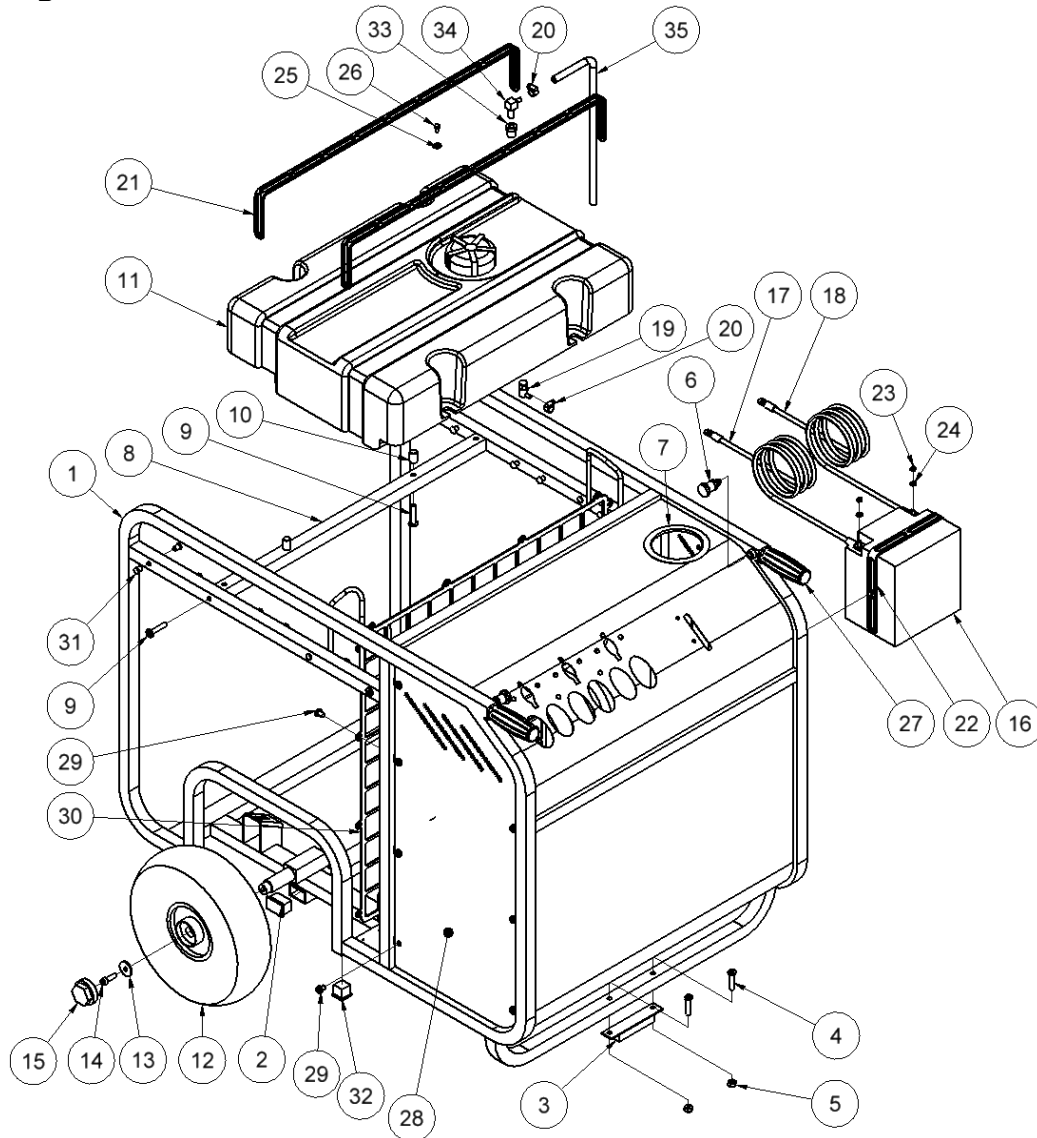


Pos.	Part No.	Description	Pcs.
1	8222842	Chassis complete MF	1
2	7723038	Tube plug 40x25	2
3	8721095	Rubber foot	1
4	7621046	Screw M8x35	2
5	7621010	Lock nut M8	2
6	7721197	Bolt <i>Loctite 243</i>	2
7	9021563	Rubber band	1
8	8222932	Tank Tube	2
9	7621795	Screw M8x40 <i>Loctite 243</i>	8
10	7722997	Distance piece	4
11	8223091	Diesel Tank 25 ltr	1
12	7722916	Wheel Ø300	2
13	7623037	Washer M8	2
14	7621496	Screw M8x25 <i>Loctite 243</i>	2
15	9923054	Hubcap	2
16	7322944	Battery 12V/28Amp	1
17	9023070	Cable red w/cable terminal	1
18	9023071	Cable black w/cable terminal	1
19	7322922	Fuel cock	1
20	7423039	Hose Clip	1
21	9023044	Rubberband fuel tank	2
22	9023045	Rubberband battery	1
23	7621011	Nut M5	2
24	7622511	Washer M5	2
25	7623047	Washer M5	1
26	7623048	Screw M5x10	1
27	9022430	Pull-out handle w/rubber grip	2
28	8222843	Side cover set	1
29	7621042	Screw M8x10 <i>Loctite 243</i>	25
30	8222968	Safety guard	1
31	7723046	Plug Ø9	8
32	7721125	Tube plug 25x25	4
33	7223077	Grommet	1
34	7223081	Angle fitting 90°	1
35	8723034	Fuel Hose Return	1

# HPP26DMF spare parts list

## From serial No. 11315

Fig. 2

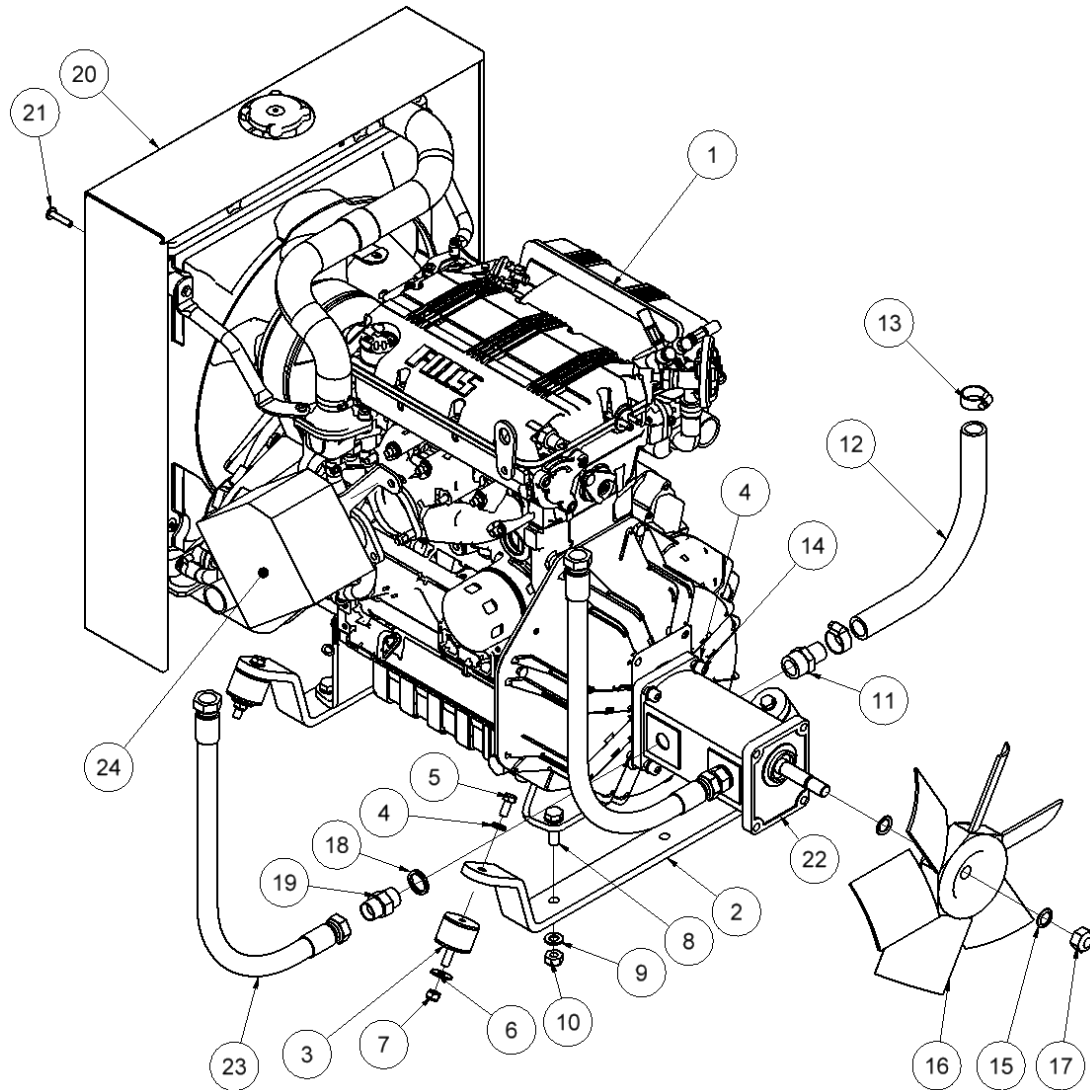


Pos.	Part No.	Description	Pcs.
1	7322948	Engine 26 HP Lombardini	1
2	8222993	Engine Bracket	1
3	7722928	Rubber damper	4
4	7621171	Washer M8	8
5	7623004	Screw M8x18	4
6	7621035	Washer M8	4
7	7621010	Lock nut M8	4
8	7621163	Screw M10x35	4
9	7621172	Washer M10	8
10	7621027	Lock nut M10	
11	7421336	Hose fitting 3/4"x3/4" <i>Loctite 542</i>	1
12	7721124	Armorvin hose	1
13	7421082	Hose clip 3/4"	2
14	7621045	Screw M8x30 <i>15NM, Loctite 243</i>	4
15	7621117	Spring washer M14	2
16	8321561	Fan ø280-6	1
17	7621111	Lock nut M14	1
18	7421072	Seal ring 1/2"	2
19	7421063	Fitting 1/2"x1/2" BSP	2
20	8222970	Radiator guard	1
21	7623062	Screw M6x30	6
22	7422929	Pump 8,0x8,0 ccm	1
23	8723087	Pressure hose	2
24	7323052	Exhaust	1

# HPP26DMF spare parts list

From serial No. 11315

Fig. 3

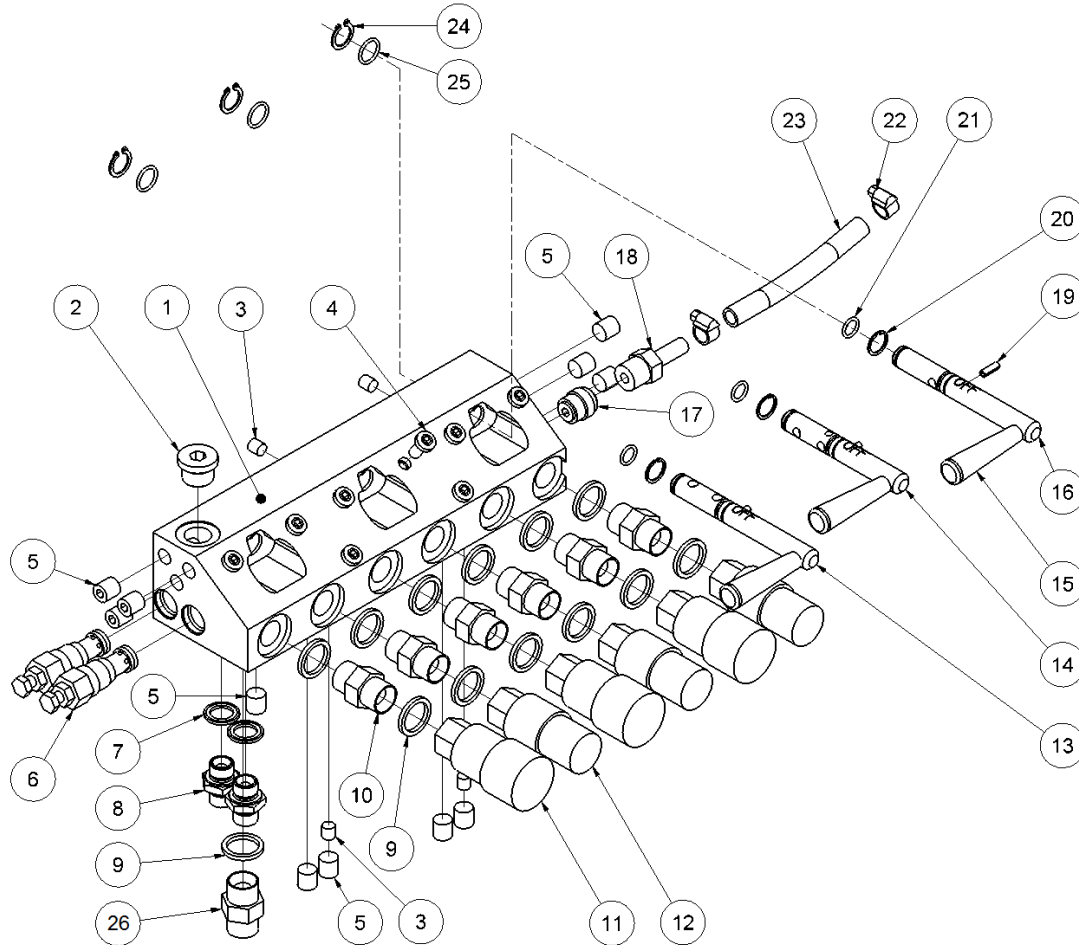


Pos.	Part No.	Description	Pcs.
1	8221932	Valve block	1
2	7621075	Threaded plug 1/2" w/seal	1
3	7621037	Pipe plug 1/8" <i>Loctite 542</i>	4
4	7621044	Screw M8x16	8
5	7622357	Pipe plug 1/4" <i>Loctite 542</i>	11
6	7421587	Pressure relief valve <i>40 Nm</i>	2
7	7521017	Seal ring 3/8"	2
8	7421771	Fitting 3/8"x3/8"	2
9	7521072	Seal ring 1/2"	13
10	7421063	Fitting 1/2"x1/2" BSP	6
11	7401142	Q.R. coupling 1/2" BSP female	3
12	7401141	Q.R. coupling 1/2" BSP male	3
13	8221933	Spool A	1
14	8221934	Spool B	1
15	7721094	Lever ON/OFF <i>Loctite 243</i>	3
16	8221935	Spool C	1
17	7421733	Check valve	1
18	7421735	Hose fitting 3/8"x1/2" <i>Loctite 542</i>	1
19	7621050	Roll pin $\varnothing 5 \times 14$	3
20	7621097	Retaining rin	3
21	7521135	O-ring	3
22	7421740	Hose clip 3/8"	2
23	9023107	Hose 3/8"	1
24	7621096	Retaining ring	3
25	7521134	O-ring	3
26	7421582	Fitting 1/2"x3/4" BSP	1
	2123003	Valveblock Compl	1

# HPP26DMF spare parts list

From serial No. 11315

Fig. 4

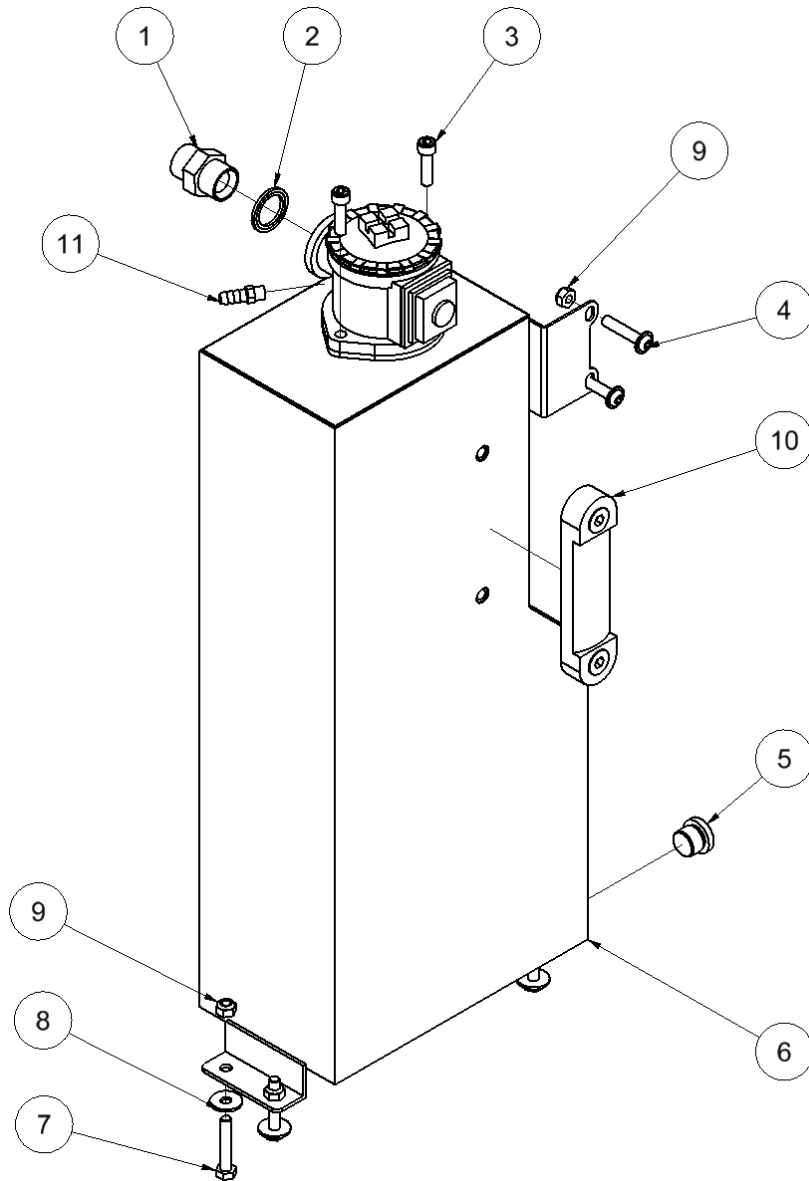


Pos.	Part No.	Description	Pcs.
1	7422260	Fitting 3/4"x3/4" <i>Loctite 542</i>	1
2	7521118	Seal ring 3/4"	1
3	7621045	Screw M8x30 <i>Loctite 243</i>	2
4	7621795	Screw M8x40	2
5	7621075	Threaded plug 1/2" w/seal	1
6	8222844	Hydraulic tank	1
7	7621049	Screw M8x45	4
8	7621035	Washer M8	4
9	7621010	Lock nut M8	6
10	7722930	Sight glass	1
11	7421734	Hose fitting 3/8"x1/8"	1

# HPP26DMF spare parts list

From serial No. 11315

Fig. 5

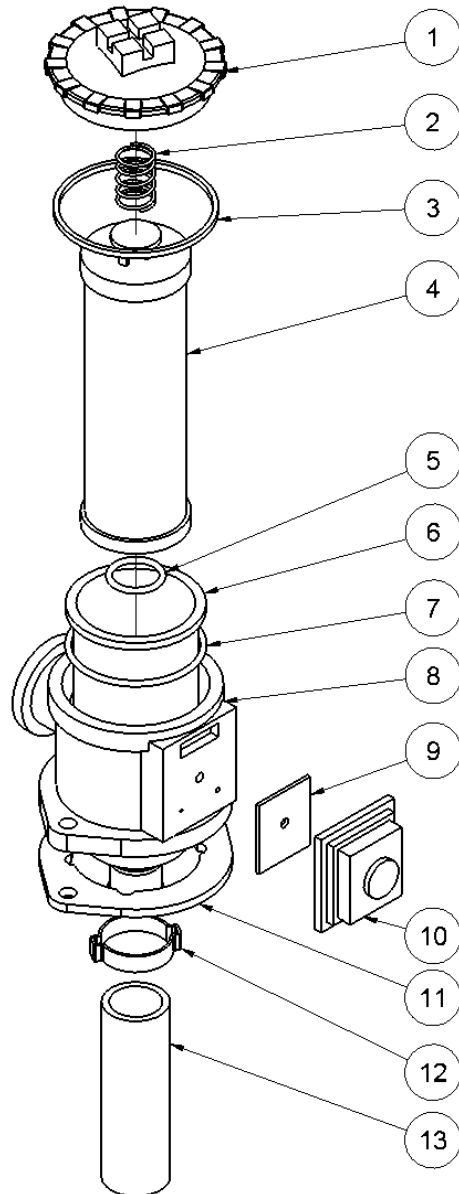


Pos.	Part No.	Description	Pcs.
1	9421189	Filter cover	1
2	9421193	Filter spring	1
3	9421502	Seal f/filter cover <i>Also included in 9421188</i>	1
4	9421190	Filter element	1
5	-	O-ring ø3x22 <i>Included in 9421188</i>	1
6	-	Filter cup	1
7	-	O-ring ø3x60 <i>Included in 9421188</i>	1
8	-	Filter housing	1
9	9422041	Ventilation filter	1
10	9422042	Cover f/ventilation filter	1
11	-	Seal <i>Included in 9421188</i>	1
12	7621789	Hose clamp	1
13	9023002	Filter hose	1
-	9421188	Seal kit filter <i>Pos. 3, 5, 7 and 11</i>	1
-	8423056	Filter complete <i>Pos. 1-13</i>	1

# HPP26DMF spare parts list


From serial No. 11315

Fig. 6

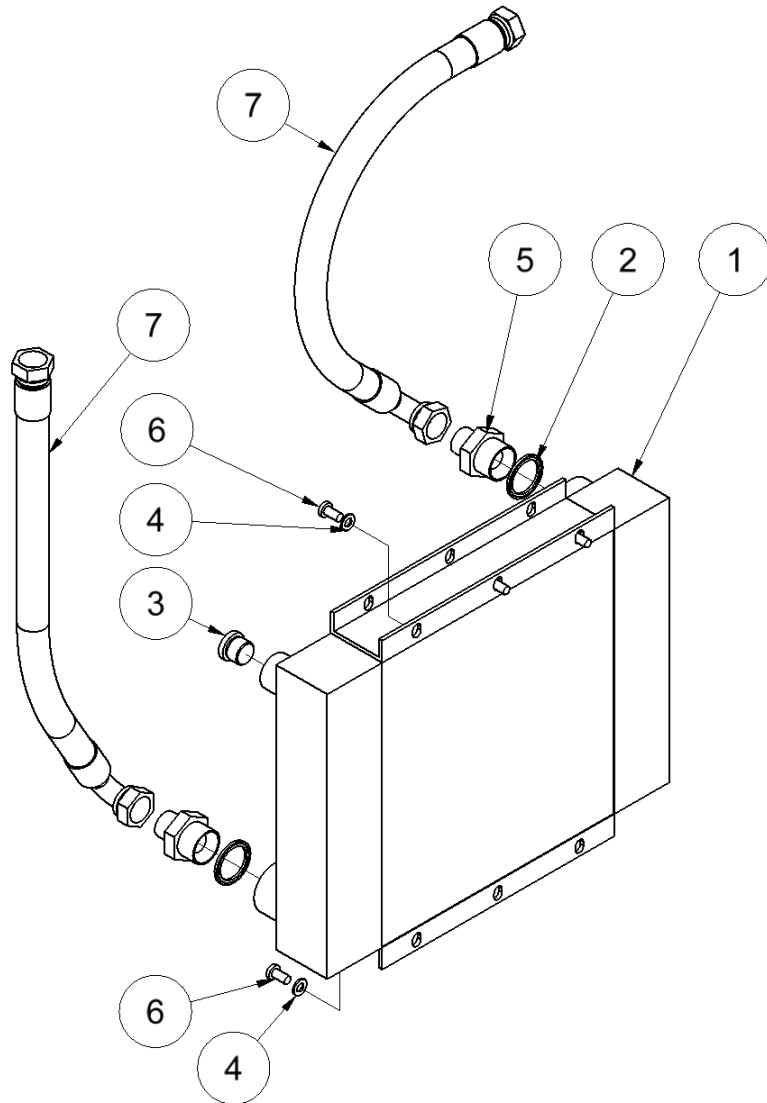

Pos.	Part No.	Description	Pcs.
1	7322923	Oil Cooler	1
2	7422980	Seal ring 1"	2
3	7422981	Threaded plug M22x1,5 w/seal	2
4	7611171	Washer M8	6
5	7422990	Fitting 3/4" BSP - 1" BSP <i>Loctite 542</i>	2
6	7621044	Screw M8x16 <i>Loctite 243</i>	6
7	8723035	Cooler Hose	2

**HPP26DMF spare parts list**  
**From serial No. 11315**  
**Fig.7**

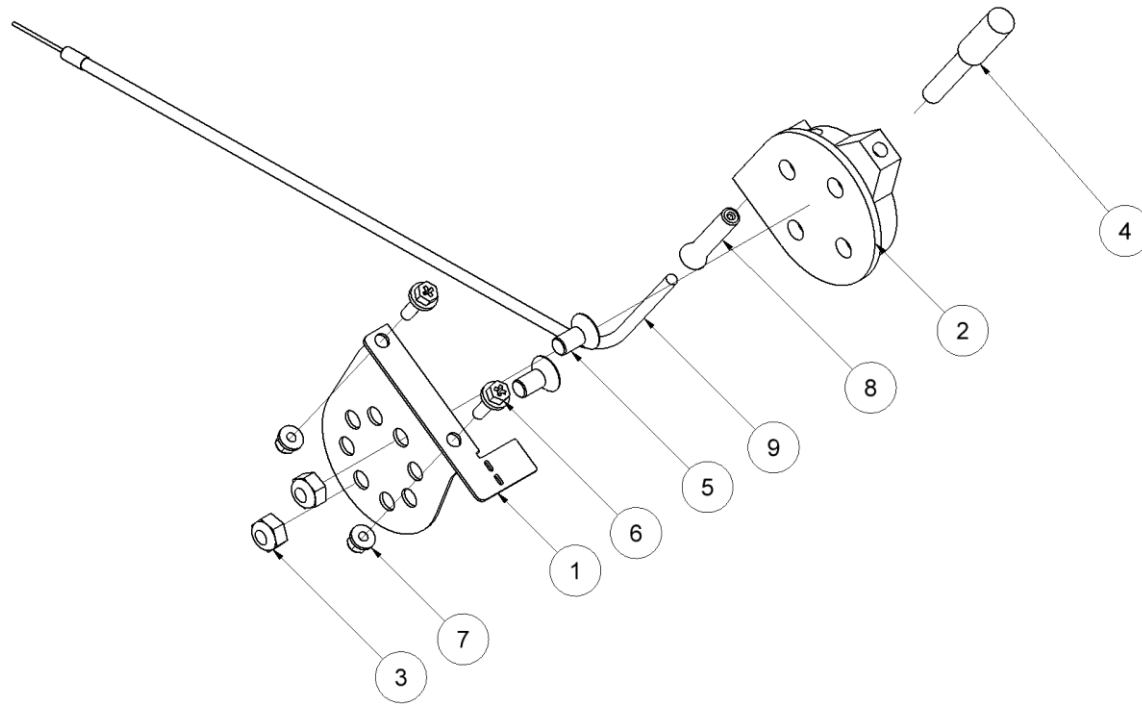

Pos.	Part No.	Description	Pcs.
1	8223079	Plate f/throttle	1
2	9023085	Throttle control	1
3	7621010	Lock nut M8	2
4	7723078	Throttle Grip	1
5	7632539	Screw M8x16	2
6	9922053	Screw M5x16	2
7	9922054	Nut M5	2
8	8622673	M8 Cable Guide	1
9	7721659	Throttle Cable	1
-	9023089	Trottle Complete Pos. 1-3, 5, 8-9	-